

# IG2 RELAY

## ON-VEHICLE INSPECTION

1. DISCONNECT CABLE FROM NEGATIVE BATTERY  
TERMINAL
- CAUTION:
- Wait at least 90 seconds after disconnecting the  
cable from the negative (-) battery terminal to  
prevent airbag and seat belt pretensioner activation.


2. REMOVE IG2 RELAY
- (a) Remove the No. 1 engine room relay block cover.
- (b) Remove the IG2 relay from the engine room relay  
block.

3. INSPECT IG2 RELAY
- (a) Measure the resistance of the IG2 relay.
- Standard resistance

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

4. INSTALL IG2 RELAY
5. CONNECT CABLE TO NEGATIVE BATTERY  
TERMINAL

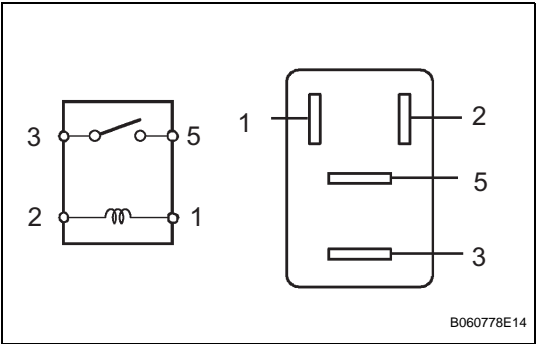

ES